Independent Swiss Watchmanufacturing
since 1922

Warranty +
User Manual

www.zeno-watch.ch

Contents

History of ZENO-WATCH Basel 2
ZENO and Basel 4
Take care on watches 6
Water Resistance 8
Instructions: .....
- Alarm AS5008 12
- Chronograph Dubois Dépraz 2020 14
- Chronograph Valjoux 7750 16
- Chronograph Valjoux 7750 Bicompax 18
- Chronograph Valjoux 7751 20
- Chronograph Valjoux 7753 22
- Day Date 24
- Diver 26
- Dual Timer GMT 28
- Dual Timer SOP 9035 30
- Dual Timer SOP 9055 32
- Pointer Date 34
Tachymeter 37
Have you got a problem with your watch? 38
Repair-Service 40
Conditions of Guarantee 43

History of ZENO-WATCH Basel

It all began in an idyllic house in La Chaux-de-Fonds, where Jules Godat had set up a modest workshop. Like many watchmakers in these days, he spent the cold winter months as a seasonal worker. In 1868, he set up in business on his own and by doing so laid the foundation for ZENO watch production as we know it today. In his little workshop, he made silver pocket watches. After Jules Godat had left, production was converted to the manufacture of railway clocks and watches. In 1900 the workshop was enlarged and equipped with electric power to drive the machines.

In 1920, André-Charles Eigeldinger took over Godat watch production. He specialized in the manufacture of observation watches for military purposes, slide rule watches and pocket watches in silver, gold and platinum. In 1922, Eigeldinger & Söhne registered the ZENO brand. This name is a reminder of the Greek philosopher Zeno of Kition and means „gift of Zeus" or „god given".

In the manufacture of ZENO watches, great care is taken to make high quality timekeeping instruments

with a good cost-benefit ratio. Since 1922, the watchmakers at ZENO have been making individual pieces with a prominent personality, distinctive character and timeless beauty.

Demand for wristwatches rose constantly and in the inter-war years production was therefore converted to wristwatches. The first ZENO wristwatches were made of gold and intended solely for export. In 1937, to mark the 15th anniversary of the ZENO brand, the first watches with an integral stop function and acoustic telemeter were made. In 1949, ZENO took part for the first time in the Swiss watch fair in Basel. In the years that followed, the ZENO engineers developed a number of digital watch models with jumping hours, pendant watches for nurses and watches for boys, until in 1960 production temporarily moved to the Atteslander workshops in Biel where the first mechanical pilot watches were developed.

The rapid pace of progress is bringing constant changes to our lives. But in the ZENO watch workshops, mechanical wrist and pocket watches are still being made by traditional techniques with the exceptional calm and concentration of experienced watchmakers. For over eighty years, ZENO watches have been produced largely by hand.

ZENO and Basel

In 1966, Felix W. Huber developed the first mechanical ZENO watch which set the tone for all future ZENO models. When the company was taken over by the Huber family, the assembly of wristwatches and the service department were transferred to Basel, on the river Rhine. The very first Basel creations included the first vacuum diver's watch, the „Compressor", which was launched in 1969 at the Watch and Jewellery Fair. In addition to in-house manufacturing, the Huber family took over commercial representation for the whole of Switzerland.

As in the case of the manufacture of the first watches back in 1868, ZENO-WATCH BASEL still sets great store by the manufacture of high quality measuring instruments with their distinctive character and timeless elegance.

We owe it to the energy of Felix W. Huber that over one hundred new watch creations are developed every year and often manufactured in extremely small series based on the historical original models. These are mechanical precision time measuring instruments which combine traditional workmanship, technology and design at the very highest level.

As it was not easy to find sufficient qualified personnel in the Basel region, cooperation with other watch making workshops was sought at an early stage. ZENO pocket watches have been produced in sunny Ticino canton since 1975 where the dials are also printed. Fashionable quartz watches are made in La Chaux-de-Fonds and Neuchâtel (Switzerland).

With the new addition of the first pilot watches made in 1965, ZENO is celebrating the renaissance of a truly great classic. The wristwatches in the latest Air Force collection follow on from the great tradition of professional airmen's watch making. The mechanical timepieces are intended for connoisseurs of timeless design and a transparent cost-benefit ratio. ZENO does not invest in advertising but in the product.

Experience for yourself the quality, love of detail and expert workmanship with which the different materials are crafted. We invite you to visit a retail store near you to have our watch collection presented to you in person. We thank you for your interest in our watches and very much hope that you will like our timepieces made with such care. We would be happy to pass enquiries on to your regional representative. Please contact us for further information or suggestions.

Take care on watches

Like any high-precision instrument, a watch needs to be serviced regularly in order to work perfectly. Obviously, we cannot indicate the intervals for such work, which depends on the model, climate and the care taken by the watch's owner.
The small amount of oil needed to lubricate the bearings of the movement gets used up. This can lead to reduced accuracy or even stop a movement. Also the crown can get damaged by hits and the little rubber seals that guarantee the tightness of the watch dry up over time, letting dust and humidity enter the movement.
As a general rule, service intervals are between 3 and 7 years, depending on the use.

We recommend:

- Keep your watch clean. Dust and dirt tend to collect in gaps in the back of the case or band.
- Clean the watch occasionally. Use a soft dry cloth to wipe off dirt, perspiration and water from the case and crystal.
- Do not use the watch in places where it is exposed to high temperature (above 60° C, or 140° F, below 0° C, or 32° F) or extreme temperature changes.

- Never open the watch yourself.
- Avoid either thermal or other shocks.
- Avoid prolonged exposure to sunlight to prevent the color from fading.
- Avoid direct contact with solvents, detergents, perfumes, cosmetic products etc., since they may damage the bracelet, the case or the gaskets.
- To ensure water resistance, gaskets must be replaced every 24 months a part of maintenance.
- Do not place the watch next to a magnet. Timekeeping will become inaccurate.
- Leather straps look better if they are kept dry. Salt water is particularly harmful.

  Do not forget that leather is permeable! Therefore avoid contact with greasy substances and cosmetic products. If you have a problem with your leather strap, contact your nearest retailer.
- Store your watch in a dry place when you are not using it.
- Be sure to use the watch with the crown pressed in (normal position).
- If your watch has a screw-type crown, be sure to tighten the crown completely.
- Do not operate the crown with wet fingers or when the watch is wet. Water may enter the watch and compromise water resistance.

Water Resistance

The water resistance is guaranteed by several seals but cannot be considered as permanent protection. They are subject to a natural aging process and need to be replaced after a certain time of use. However, under certain circumstances, the integrity of the moisture resistance may become compromised within a shorter period of time. Furthermore, impacts to the crown can influence the water resistance as well. A perfect long-term protection is given by annual water resistance tests.

Water Resistance Classification

The „Water Resistant" mark has come to replace the „Water Proof" and is now described by the following ISO-Standard 2281: Declaration on dial or back.

NO DECLARATION

- This model is NOT water resistant.
  Any water contact should be avoided.

WATER RESIST

- This model is resistant to minor and accidental splashes.
  Greater water contact should be avoided.

*WATER RESISTANT 30M (3 ATM / 100 Feet) **

- Protected in everyday life, bathing, accidental splashes, short swimming or car washing - it is resistant against perspiration, water vapor and rain drops.

  It is tested for water resistance up to 3 ATM, and must be able to survive 30 minutes under water at a depth of 1 m (3 feet) followed by 90 seconds under a pressure corresponding to 30 meters.

*WATER RESISTANT 50M (5 ATM / 160 Feet) **

- Protected in everyday life, bathing, accidental splashes, short swimming, car washing, parachuting, hang gliding and skiing - it is resistant against perspiration, water vapor and rain drops.
  It is tested for water resistance up to 5 ATM corresponding to 50 meters.

*WATER RESISTANT 100M (10 ATM / 300 Feet) **

- Protected in everyday life, swimming, snorkeling, mountain climbing, parachuting, hang gliding, skiing and all kinds of sports challenges.
  It is tested for water resistance up to 10 ATM corresponding to 100 meters.

*WATER RESISTANT 200M (20 ATM / 660 Feet) **

- Protected in everyday life, free diving without scuba gear, and all kinds of water sports.
  It is tested for water resistance up to 20 ATM corresponding to 200 meters.

*WATER RESISTANT 300M (30 ATM / 1000 Feet) **

- Protected for scuba diving to a depth of 30 meters, for 2 hours.
  It is tested for water resistance up to 30 ATM corresponding to 300 meters.

*WATER RESISTANT 500M (50 ATM / 1650 Feet) **

- Protected for scuba diving to a depth of 50 meters, for 2 hours. It is tested for water resistance up to 50 ATM corresponding to 500 meters.

** The meters value does not relate to a diving depth but to the air pressure used in the course of the water resistance test (DIN 8310, ISO 2281, NIHS 91-10).*

We recommend to have your watch tested by authorized Service-Centers, especially before summer holidays.

- To ensure water resistance, gaskets must be replaced every 24 months a part of maintenance.
- If moisture has entered the watch, or if the inside to the crystal is fogged up and does not become clear within a day, or sea-water enters the watch, immediately take or send the watch to a Service-Center for repair.
- Avoid contact with water and dampness to prevent discoloration and deformation.
- Leaving the watch in such a state will allow corrosion to form inside.
- Accumulated dust and dirt may cause corrosion and soil your clothing.
- When you want bathing in the sea, always rinse your watch with warm water afterwards. Condensation can appear in any watch and is caused by a sudden change in temperature.

- When a watch is removed from a cold room and placed into a warm room, or vice versa. The appearance of condensation does not mean the watch will not operate but it should be checked.

Diving Watches

The unidirectional turning bezel on your ZENO Diving-Watch, with its precision ratchet, is for the measurement of dive time. The shape of the bezel is designed for easy hand rotation, even with diving gloves. For safety, the bezel can only turn counter clockwise. If it is accidentally moved it will indicate a longer elapsed dive time. At the start of a dive, turn the bezel so that the zero mark is in front of the minute-hand. The minute hand will always show the number of minutes that have elapsed since the dive started.
The robust construction and the protection system of the diving watch quarantee maximum reliability. To ensure water resistance, we recommend that the watch is checked once a year by your ZENO retailer. Clean the watch regularly with lukewarm soapy water. This cleaning is especially recommended after contact with sea-water.

Alarm AS5008

To ensure correct use, please read these instructions carefully:

Specifications

Swiss precision mechanical/automatic winding with/without date indication and sweep seconds with hack feature. 17/25 jewels, shock-resistant, anti-magnetic, 28'800 vibrations per hour.

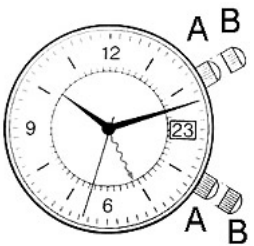

Upper Crown (Alarm)

A normal position:
Winding the alarm device. Alarm locked.

B pulled position:
Alarm activated. Setting on the alarm time (counter clockwise ↺ only).
To shut off the alarm, push the crown to normal position.

Lower Crown (Time + Date)

A normal position:
Winding up the watch movement.

B pulled position:
Setting of hour and minute hands.

Setting on the date

Turn the hands clockwise ↻ to 24h (midnight). The date indicator will jump to the next day. Moving the hands between 21:30 and 00:30h. In **A** clock and counter clockwise direction will provoke the date to jump forward. After the date setting, the time has to be adjusted in a clockwise direction.

Warning: Correction cannot be effected between 8pm and 2am. While turning the hands please observe that date will change at 12pm (midnight).
The watch will now be set correctly and running. The automatic movement will keep the watch wound as long as the watch is worn.

Be sure to use the watch with the crown pressed in (normal position). Do not operate the crown with wet fingers or when the watch is wet. Water may enter the watch and compromise water resistance. If moisture has entered the watch, or if the inside to the crystal is fogged up and does not become clear within a day, or sea-water enters the watch, immediately take or send the watch to a ZENO Service Center for repair. Leaving the watch in such a state will allow corrosion to form inside. Keep your watch clean. Dust and dirt tend to collect in gaps in the back of the case or band. Accumulated dust and dirt may cause corrosion and soil your clothing. Clean the watch occasionally. Use a soft dry cloth to wipe off dirt, perspiration and water from the case and crystal. Do not use the watch in places where it is exposed to high temperature. Doing so may result in deterioration of the watch or parts. Do not place the watch next to a magnet. Timekeeping will become inaccurate. Store your watch in a dry place when you are not using it.

Look at Conditions of Guarantee!

Chronograph Dubois Dépraz 2020

To ensure correct use, please read these instructions carefully:

Specifications

Precision self-winding movement (automatic) Swiss made, time indication, stopwatch (measuring 60 seconds, 30 minutes, 12 hours), 25 jewels, 28'800 pulsations per hour, Incabloc anti-shock system, Nivaflex spring, tight tolerance of adjustment, power reserve till 42 hours.

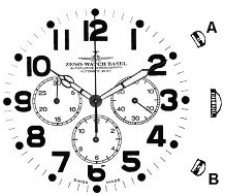

Setting Calendar

1 Activate the Chronograph:
- Press pusher **A**

2 Stop the Chronograph:
- Press pusher **A** (can be activated again, by pusher A)

3 Reset to Zero:
- Press pusher **B** (Chronograph functions are stopped and reset to zero)

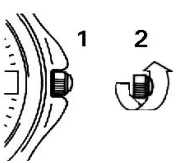

Setting Time

1 neutral position:
= winding position

2 hand setting and second stop position:
- Adjust hour and minute by turning the crown

Warning: Before using the Chrono make sure the watch has been wound up!

The watch will now be set correctly and running. The automatic movement will keep the watch wound as long as the watch is worn. The Chronograph is an independent timing system for brief intervals of time.

Be sure to use the watch with the crown pressed in (normal position). If your watch has a screw-type crown, be sure to tighten the crown completely. Do not operate the crown with wet fingers or when the watch is wet. Water may enter the watch and compromise water resistance. If moisture has entered the watch, or if the inside to the crystal is fogged up and does not become clear within a day, or seawater enters the watch, immediately take or send the watch to a ZENO Service Center for repair. Leaving the watch in such a state will allow corrosion to form inside. Keep your watch clean. Dust and dirt tend to collect in gaps in the back of the case or band. Accumulated dust and dirt may cause corrosion and soil your clothing. Clean the watch occasionally. Use a soft dry cloth to wipe off dirt, perspiration and water from the case and crystal. Do not use the watch in places where it is exposed to high temperature. Doing so may result in deterioration of the watch or parts. Do not place the watch next to a magnet. Timekeeping will become inaccurate. Store your watch in a dry place when you are not using it.

Look at Conditions of Guarantee!

Chronograph Valjoux 7750

To ensure correct use, please read these instructions carefully:

Specifications

Precision self-winding movement (automatic) Swiss made, time, day and date indication, stopwatch (measuring 60 seconds, 30 minutes, 12 hours), 25 jewels, 28'800 pulsations per hour, Incabloc anti-shock system, Nivaflex spring, tight tolerance of adjustment, power reserve till 42 hours.

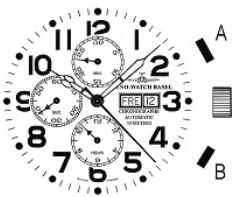

1 Activate the Chronograph:
- Press pusher **A**

2 Stop the Chronograph:
- Press pusher **A** (can be activated again)

3 Reset to Zero:
- Press pusher **B**
(Chronograph functions are stopped and reset to zero)

Setting Time + Calendar

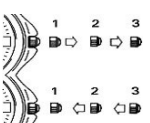

1 neutral position
= winding position

2 day + date adjustment position
- ↻ forward quick date-adjustment
- ↺ backward quick day-adjustment

3 hand setting and second stop position
- Adjust hour + minute by turning the crown

Warning: Correction cannot be effected between 8pm and 2am. While turning the hands please observe that date will change at 12pm (midnight).

The watch will now be set correctly and running. The automatic movement will keep the watch wound as long as the watch is worn. The Chronograph is an independent timing system for brief intervals of time.

Before using the Chrono make sure the watch has been wound up!

Be sure to use the watch with the crown pressed in (normal position). If your watch has a screw-type crown, be sure to tighten the crown completely. Do not operate the crown with wet fingers or when the watch is wet. Water may enter the watch and compromise water resistance. If moisture has entered the watch, or if the inside to the crystal is fogged up and does not become clear within a day, or seawater enters the watch, immediately take or send the watch to a ZENO Service Center for repair. Leaving the watch in such a state will allow corrosion to form inside. Keep your watch clean. Dust and dirt tend to collect in gaps in the back of the case or band. Accumulated dust and dirt may cause corrosion and soil your clothing. Clean the watch occasionally. Use a soft dry cloth to wipe off dirt, perspiration and water from the case and crystal. Do not use the watch in places where it is exposed to high temperature. Doing so may result in deterioration of the watch or parts. Do not place the watch next to a magnet. Timekeeping will become inaccurate. Store your watch in a dry place when you are not using it.

Look at Conditions of Guarantee!

Chronograph Valjoux 7750 Bicompax

To ensure correct use, please read these instructions carefully:

Specifications

Precision self-winding movement (automatic) Swiss made, time, day and date indication, stopwatch (measuring 60 seconds, 30 minutes, 12 hours), 25 jewels, 28'800 pulsations per hour, Incabloc anti-shock system, Nivaflex spring, tight tolerance of adjustment, power reserve till 42 hours.

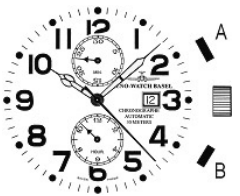

1 Activate the Chronograph:
- Press pusher **A**

2 Stop the Chronograph:
- Press pusher **A** (can be activated again)

3 Reset to Zero:
- Press pusher **B**
(Chronograph functions are stopped and reset to zero)

Setting Time + Calendar

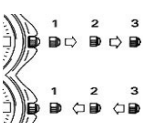

1 neutral position
= winding position

2 day + date adjustment position
- ↻ forward quick date-adjustment
- ↺ backward quick day-adjustment

3 hand setting and second stop position
- Adjust hour + minute by turning the crown

Warning: Correction cannot be effected between 8pm and 2am. While turning the hands please observe that date will change at 12pm (midnight).

The watch will now be set correctly and running. The automatic movement will keep the watch wound as long as the watch is worn. The Chronograph is an independent timing system for brief intervals of time.

Before using the Chrono make sure the watch has been wound up!

Be sure to use the watch with the crown pressed in (normal position). If your watch has a screw-type crown, be sure to tighten the crown completely. Do not operate the crown with wet fingers or when the watch is wet. Water may enter the watch and compromise water resistance. If moisture has entered the watch, or if the inside to the crystal is fogged up and does not become clear within a day, or seawater enters the watch, immediately take or send the watch to a ZENO Service Center for repair. Leaving the watch in such a state will allow corrosion to form inside. Keep your watch clean. Dust and dirt tend to collect in gaps in the back of the case or band. Accumulated dust and dirt may cause corrosion and soil your clothing. Clean the watch occasionally. Use a soft dry cloth to wipe off dirt, perspiration and water from the case and crystal. Do not use the watch in places where it is exposed to high temperature. Doing so may result in deterioration of the watch or parts. Do not place the watch next to a magnet. Timekeeping will become inaccurate. Store your watch in a dry place when you are not using it.

Look at Conditions of Guarantee!

Chronograph Valjoux 7751

To ensure correct use, please read these instructions carefully:

Specifications

Precision self-winding movement (automatic) Swiss made, 25 jewels, 28'800 pulsations per hour, Incabloc anti-shock system, Nivaflex spring, tight tolerance of adjustment, power reserve till 42 hours.
The Chronograph is an independent timing system for brief intervals of time.

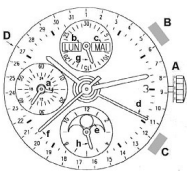

Indicators

a = 24h-display; b = day; c = month; d = date; e = moon-phase; f = second-counter; g = minute-counter; h = hour-counter; i = small-sec. display

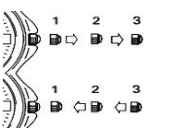

Activate the Chronograph:
- Press pusher **B**

Stop the Chronograph:
- Press pusher **B** (can be activated again, by pusher A)

Reset to Zero:
- Press pusher **C**
  (Chronograph functions are stopped and reset to zero)

Settings

Neutral	Pos. 1	Winding position
Time	Pos. 3	Adjust hour and minute by turning the crown **A** clock- or anticlockwise
Day		Depress the recessed button **D**
Date	Pos. 2	Turn **A** anticlockwise (quick adjustment)
Month	Pos. 2	Turn **A** anticlockwise (changing after 31)
Moon phase	Pos. 2	Turn **A** clockwise (quick adjustment)

Warning: Correction cannot be effected between 8pm and 2am. While turning the hands please observe that date will change at 12pm (midnight).
The watch will now be set correctly and running. The automatic movement will keep the watch wound as long as the watch is worn.
Before using the Chrono make sure the watch has been wound up!

Be sure to use the watch with the crown pressed in (normal position). If your watch has a screw-type crown, be sure to tighten the crown completely. Do not operate the crown with wet fingers or when the watch is wet. Water may enter the watch and compromise water resistance. If moisture has entered the watch, or if the inside to the crystal is fogged up and does not become clear within a day, or sea-water enters the watch, immediately take or send the watch to a ZENO Service Center for repair. Leaving the watch in such a state will allow corrosion to form inside. Keep your watch clean. Dust and dirt tend to collect in gaps in the back of the case or band. Accumulated dust and dirt may cause corrosion and soil your clothing. Clean the watch occasionally. Use a soft dry cloth to wipe off dirt, perspiration and water from the case and crystal. Do not use the watch in places where it is exposed to high temperature. Doing so may result in deterioration of the watch or parts. Do not place the watch next to a magnet. Timekeeping will become inaccurate. Store your watch in a dry place when you are not using it.

Look at Conditions of Guarantee!

Chronograph Valjoux 7753

To ensure correct use, please read these instructions carefully:

Specifications

Precision self-winding movement (automatic) Swiss made, time and date (04:30) indication, stopwatch (measuring 60 seconds, 30 minutes, 12 hours), 25 jewels, 28'800 pulsations per hour, Incabloc anti-shock system, Nivaflex spring, tight tolerance of adjustment, power reserve till 42 hours.

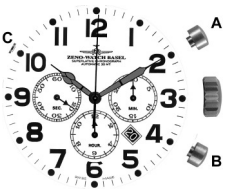

1 Activate the Chronograph:
- Press pusher **A**

2 Stop the Chronograph:
- Press pusher **A** (can be activated again, by pusher A)

3 Reset to Zero:
- Press pusher **B**
(Chronograph functions are stopped and reset to zero)

Setting Time + Calendar

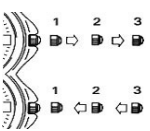

1 winding position
- ↻ can be wound up

2 neutral position
- no funktion

3 time setting and second stop position
- Adjust hour and minute by turning the crown

Date setting:
- Depress the recessed button **C** (at 10:00)

Warning: Correction cannot be effected between 8pm and 2am. While turning the hands please observe that date will change at 12pm (midnight).

The watch will now be set correctly and running. The automatic movement will keep the watch wound as long as the watch is worn. The Chronograph is an independent timing system for brief intervals of time.

Before using the Chrono make sure the watch has been wound up!

Be sure to use the watch with the crown pressed in (normal position). If your watch has a screw type crown, be sure to tighten the crown completely. Do not operate the crown with wet fingers or when the watch is wet. Water may enter the watch and compromise water resistance. If moisture has entered the watch, or if the inside to the crystal is fogged up and does not become clear within a day, or seawater enters the watch, immediately take or send the watch to a ZENO Service Center for repair. Leaving the watch in such a state will allow corrosion to form inside. Keep your watch clean. Dust and dirt tend to collect in gaps in the back of the case or band. Accumulated dust and dirt may cause corrosion and soil your clothing. Clean the watch occasionally. Use a soft dry cloth to wipe off dirt, perspiration and water from the case and crystal. Do not use the watch in places where it is exposed to high temperature. Doing so may result in deterioration of the watch or parts. Do not place the watch next to a magnet. Timekeeping will become inaccurate. Store your watch in a dry place when you are not using it.

Look at Conditions of Guarantee!

Day Date

To ensure correct use, please read these instructions carefully:

Specifications

Precision self-winding movement (automatic) Swiss made, time, day and date indication, 21 or 25 jewels, 21‘ or 28‘800 pulsations per hour, Incabloc anti-shock system, Nivaflex spring, tight tolerance of adjustment, power reserve till 30 hours.

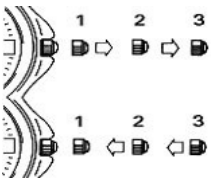

Setting Time + Calendar

1 neutral position
= winding position

2 day + date adjustment position
- ↻ forward quick date-adjustment
- ↺ backward quick day-adjustment

3 hand setting and second stop position
- Adjust hour and minute by turning the crown

Warning: Correction cannot be effected between 8pm and 2am. While turning the hands please observe that date will change at 12pm (midnight).

The watch will now be set correctly and running. The automatic movement will keep the watch wound as long as the watch is worn.

Be sure to use the watch with the crown pressed in (normal position). If your watch has a screw-type crown, be sure to tighten the crown completely. Do not operate the crown with wet fingers or when the watch is wet. Water may enter the watch and compromise water resistance. If moisture has entered the watch, or if the inside to the crystal is fogged up and does not become clear within a day, or seawater enters the watch, immediately take or send the watch to a ZENO Service Center for repair. Leaving the watch in such a state will allow corrosion to form inside. Keep your watch clean. Dust and dirt tend to collect in gaps in the back of the case or band. Accumulated dust and dirt may cause corrosion and soil your clothing. Clean the watch occasionally. Use a soft dry cloth to wipe off dirt, perspiration and water from the case and crystal. Do not use the watch in places where it is exposed to high temperature. Doing so may result in deterioration of the watch or parts. Do not place the watch next to a magnet. Timekeeping will become inaccurate. Store your watch in a dry place when you are not using it.

Look at Conditions of Guarantee!

Diver

To ensure correct use, please read these instructions carefully:

Specifications

Precision Swiss self-winding movement (automatic) time, day and date indication, Incabloc anti-shock system, Nivaflex spring, tight tolerance of adjustment, power reserve till 30 hours (not all watches!).

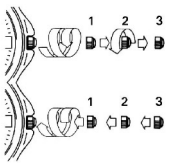

Setting Time + Calendar

1 neutral position (unscrew crown first) = winding position
2 day + date adjustment position (not all watches!)
- Date: turn crown clockwise ↻
- Day: turn crown counter clockwise ↺
3 hand setting and second stop position
- Adjust hour and minute by turning the crown

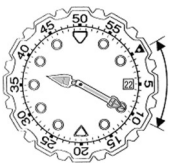

Warning: Correction cannot be effected between 8pm and 2am. While turning the hands please observe that date will change at 12pm (midnight). Army-Diver's without quick setting-date!

The Register Ring is convenient way to keep track of diving time, permitting the indication of the elapsed and remaining times. Turn the register ring counter clockwise ↺ while pushing it. It is locked under normal conditions to prevent free rotation, and can not be turned in the reverse direction for safety reasons.

Determination of elapsed time: Preset the mark on the register ring to the minute hand, and the elapsed time can be shown by the register ring scale (example 10 minutes).

Determination of remaining time: Preset the mark on the register ring to a certain required time, and the remaining time can be shown by the register ring scale.

Be sure to check the following points when use for diving:

Before Diving - There are no cracks in the case, bracelet, no scratches or chipped portions in glass of the watch; - The time has been properly set; - The crown is properly in lock position; - The register ring properly rotates counter clockwise. It does not rotate clockwise (never force to rotate it at this time); - The band should be fastened tightly to watch case.

During Diving - Be sure not to operate in water; - Be careful not to drop or hit the watch against a rock or other hard items.

After Diving - Wash the watch with fresh water to prevent rust formations due to sea-water; - Wipe off water droplets adhering to the watch after washing.

Be sure to use the watch with the crown tighten completely. Do not operate the crown with wet fingers or when the watch is wet. If moisture has entered the watch, or if the inside to the crystal is fogged up and does not become clear within a day, or sea-water enters the watch, immediately take or send the watch to a Service-Center for repair. Leaving the watch in such a state will allow corrosion. Dust and dirt tend to collect in gaps in the back of the case or band. Accumulated dust and dirt may cause corrosion and soil your clothing. Clean the watch occasionally. Do not use the watch in places where it is exposed to high temperature. Doing so may result in deterioration of the watch or parts.

Dual Timer GMT

To ensure correct use, please read these instructions carefully:

Specifications

Precision Swiss self-winding movement (automatic), time, 24h and date indication, 21 jewels, 28'800 pulsations per hour, Incabloc anti-shock system, Nivaflex spring, tight tolerance of adjustment, power reserve till 40 hours.

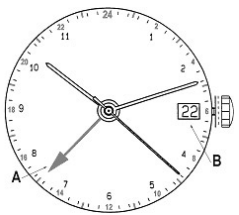

A 24h-indication (Dual time)

B Date-indication

Setting Time + Calendar

1 neutral position
= winding position

2 day + date adjustment position
A turn crown clockwise ↻
B turn crown counter clockwise ↺

3 hand setting and second stop position
- Adjust hour and minute by turning the crown

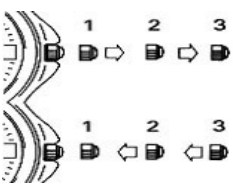

Warning: Correction cannot be effected between 8pm and 2am. While turning the hands please observe that date will change at 12pm (midnight).

The watch will now be set correctly and running. The automatic movement will keep the watch wound as long as the watch is worn.

Be sure to use the watch with the crown pressed in (normal position). If your watch has a screw-type crown, be sure to tighten the crown completely. Do not operate the crown with wet fingers or when the watch is wet. Water may enter the watch and compromise water resistance. If moisture has entered the watch, or if the inside to the crystal is fogged up and does not become clear within a day, or sea-water enters the watch, immediately take or send the watch to a ZENO Service Center for repair. Leaving the watch in such a state will allow corrosion to form inside. Keep your watch clean. Dust and dirt tend to collect in gaps in the back of the case or band. Accumulated dust and dirt may cause corrosion and soil your clothing. Clean the watch occasionally. Use a soft dry cloth to wipe off dirt, perspiration and water from the case and crystal. Do not use the watch in places where it is exposed to high temperature. Doing so may result in deterioration of the watch or parts. Do not place the watch next to a magnet. Timekeeping will become inaccurate. Store your watch in a dry place when you are not using it.

Look at Conditions of Guarantee!

Dual Timer SOP 9035

To ensure correct use, please read these instructions carefully:

Specifications

Precision Swiss self-winding movement (automatic), time, day and date indication, 30 jewels, 21' or 28'800 pulsations per hour, Incabloc anti-shock system, Nivaflex spring, fine setting, tight tolerance of adjustment, power reserve till 30 hours.

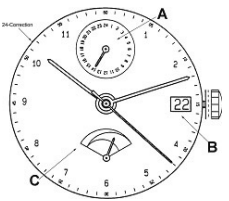

A 24-hour indication (Dual time)

B Date indication

C Power Reserve indication

Setting Time + Calendar

1 neutral position
= winding position

2 calendar adjustment position
B date indication: turn crown counter clockwise ↺

3 hand setting and second stop position
- Adjust hour and minute by turning the crown

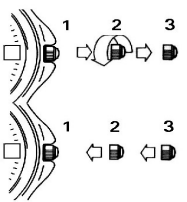

Dual time:
- Depress the recessed button at 10 o'clock

Warning: Correction cannot be effected between 8pm and 2am. While turning the hands please observe that date will change at 12pm (midnight).

The watch will now be set correctly and running. The automatic movement will keep the watch wound as long as the watch is worn.

Be sure to use the watch with the crown pressed in (normal position). If your watch has a screw-type crown, be sure to tighten the crown completely. Do not operate the crown with wet fingers or when the watch is wet. Water may enter the watch and compromise water resistance. If moisture has entered the watch, or if the inside to the crystal is fogged up and does not become clear within a day, or seawater enters the watch, immediately take or send the watch to a ZENO Service Center for repair. Leaving the watch in such a state will allow corrosion to form inside. Keep your watch clean. Dust and dirt tend to collect in gaps in the back of the case or band. Accumulated dust and dirt may cause corrosion and soil your clothing. Clean the watch occasionally. Use a soft dry cloth to wipe off dirt, perspiration and water from the case and crystal. Do not use the watch in places where it is exposed to high temperature. Doing so may result in deterioration of the watch or parts. Do not place the watch next to a magnet. Timekeeping will become inaccurate. Store your watch in a dry place when you are not using it.

Look at Conditions of Guarantee!

Dual Timer SOP 9055

To ensure correct use, please read these instructions carefully:

Specifications

Precision Swiss self-winding movement (automatic), time, day and date indication, 30 jewels, 21‘ or 28‘800 pulsations per hour, Incabloc anti-shock system, Nivaflex spring, fine setting, tight tolerance of adjustment, power reserve till 30 hours.

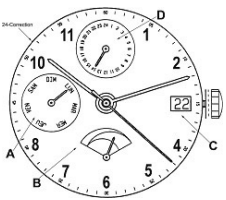

A Day indication

B Power Reserve indication

C Date indication

D 24-hour indication (Dual time)

Setting Time + Calendar

1 neutral position
= winding position

2 calendar adjustment position
C date indication: turn crown counter clockwise ↺

3 hand setting and second stop position
- Adjust hour and minute by turning the crown

A day indication: turn crown clockwise (no quick setting)

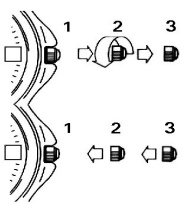

Dual time:
- Depress the recessed button at 10 o‘clock

Warning: Correction cannot be effected between 8pm and 2am. While turning the hands please observe that date will change at 12pm (midnight).

The watch will now be set correctly and running. The automatic movement will keep the watch wound as long as the watch is worn.

Be sure to use the watch with the crown pressed in (normal position). If your watch has a screw-type crown, be sure to tighten the crown completely. Do not operate the crown with wet fingers or when the watch is wet. Water may enter the watch and compromise water resistance. If moisture has entered the watch, or if the inside to the crystal is fogged up and does not become clear within a day, or seawater enters the watch, immediately take or send the watch to a ZENO Service Center for repair. Leaving the watch in such a state will allow corrosion to form inside. Keep your watch clean. Dust and dirt tend to collect in gaps in the back of the case or band. Accumulated dust and dirt may cause corrosion and soil your clothing. Clean the watch occasionally. Use a soft dry cloth to wipe off dirt, perspiration and water from the case and crystal. Do not use the watch in places where it is exposed to high temperature. Doing so may result in deterioration of the watch or parts. Do not place the watch next to a magnet. Timekeeping will become inaccurate. Store your watch in a dry place when you are not using it.

Look at Conditions of Guarantee!

Pointer Date

To ensure correct use, please read these instructions carefully:

Specifications

Precision Swiss self-winding movement (automatic) time and analogue date indication (red hand), 21 jewels, 28'800 pulsations per hour, Incabloc anti-shock system, Nivaflex spring, tight tolerance of adjustment, power reserve till 30 hours.

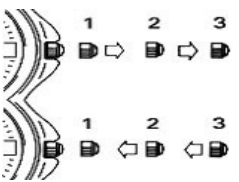

Setting Time + Date

1 neutral position
= winding position

2 date adjustment position
- Turn crown clockwise ↻

3 hand setting and second stop position
- Adjust hour and minute by turning the crown

Warning: Correction cannot be effected between 8pm and 2am. While turning the hands please observe that date will change at 12pm (midnight).

The watch will now be set correctly and running. The automatic movement will keep the watch wound as long as the watch is worn.

Be sure to use the watch with the crown pressed in (normal position). If your watch has a screw-type crown, be sure to tighten the crown completely. Do not operate the crown with wet fingers or when the watch is wet. Water may enter the watch and compromise water resistance. If moisture has entered the watch, or if the inside to the crystal is fogged up and does not become clear within a day, or seawater enters the watch, immediately take or send the watch to a ZENO Service Center for repair. Leaving the watch in such a state will allow corrosion to form inside. Keep your watch clean. Dust and dirt tend to collect in gaps in the back of the case or band. Accumulated dust and dirt may cause corrosion and soil your clothing. Clean the watch occasionally. Use a soft dry cloth to wipe off dirt, perspiration and water from the case and crystal. Do not use the watch in places where it is exposed to high temperature. Doing so may result in deterioration of the watch or parts. Do not place the watch next to a magnet. Timekeeping will become inaccurate. Store your watch in a dry place when you are not using it.

Look at Conditions of Guarantee!

Tachymeter

The Tachymeter-Scale provides information about the average speed for 1 km (= 0.6214 miles).

Start the chronograph when passing the first kilometer index and stop it when passing the second. The scale shows you the average speed.

Examples:

15 seconds for one kilometer = average speed of 240 km/h,
30 seconds for one kilometer = average speed of 120 km/h,
45 seconds for one kilometer = average speed of 80 km/h,
60 seconds for one kilometer = average speed of 60 km/h

Have you got a problem with your watch?

Your nearest ZENO representative is usually the best place to contact for help, and it should certainly be the first.

1. Please contact first your ZENO dealer and ask for a Service-Center in your country. (You will find the address of your dealer in the guarantee certificate.)

2. In case there is no Service-Center in your country, please send the watch back to your dealer or to the worldwide Service-Center:

   ZENO-WATCH BASEL
   Service-Center
   P.O. Box
   CH-4013 Basel (Switzerland)

Please send your watch, carefully packed, together with Euro 20 ($ 20) in cash (to cover return postage and handling charges), the guarantee certificate, completed with your correct name and return address.

For customs reasons please declare the goods to be REPAIRED!!!

Repairs without original and signed international ZENO guarantee certificate or after the guarantee period will be charged. Owner will be charged for postage, insurance and such costs as may be incurred outside the normal repair costs under the guarantee. For those customers requiring their watches to be repaired in countries other than those where the purchase was originally made, repair services are available though it is to be acknowledged that it might take somewhat longer than normal.

The ZENO repair service is, of course, also available after the guarantee period has expired for repair and maintenance work against an appropriate charge. Payment in advance after our repair estimate, or by Credit Card. - Sometimes it is cheaper to contact first a qualified watchmaker in your area. (Must have experience with Swiss Watches!) Please ask your watchmaker for a free estimate!

Please note that ZENO only ensures full warranty when the ZENO watch is bought directly from one of the authorized dealers. The warranty certificate must be properly stamped, signed with the dealers name and show the exact date of purchase.

Only authorized ZENO retailer or other Service-Centers are qualified to ensure proper after-sales service and are authorized to provide the warranty services in accordance to Swiss quality standards.

The water resistance is only guaranteed if the watch is declared by „water resistance 10 ATM or more“ and the watch has not been subjected to severe shocks, the crystal and crown are not damaged, and the instructions have been carefully followed.

Repair-Service

We recommend that a general overhaul be performed every three years and that all water resistant watches be tested once a year for case tightness.
As a general rule, service intervals are between 3 and 7 years, depending on the use.
Your nearest ZENO representative is usually the best place to contact for help, and it should certainly be the first. These distributors can be located in internet at www.zeno-watch.ch.
Please contact first your ZENO dealer and ask for a Service-Center in your country. In case there is no Service-Center in your country, please send the watch back to your dealer or to:

ZWB Service-Center
P.O. Box 464
CH-4013 Basel (Switzerland)

Repairs without original and signed guarantee certificate or after the guarantee period will be charged.
Please send your watch, carefully packed, together with Euro 20.00 ($ 20) in cash (to cover return postage and handling charges), the guarantee certificate, completed with your correct name and return address.
For customs reasons please declare the goods to be REPAIRED!!!
Owner will be charged for postage, insurance and such coasts as may be incurred outside the normal repair costs under the guarantee.
For those customers requiring their watches to be repaired in countries other than those where the purchase was originally made, repair services are available though it is to be acknowledged that it might take somewhat longer than normal.

The ZWB repair service is, of course, also available after the guarantee period has expired for repair and maintenance work against an appropriate charge. (Payment in advance after our repair estimate, or Visa, Diners, AMEX, MasterCard.)
Before you send us the watch, please note, that sometimes it is cheaper to contact first a qualified watchmaker in your area, and ask him for a free estimate! Because we have to demand you for the transport charges to you country.
Please note that ZWB only ensures full warranty when the watch is bought directly from one of the authorized dealers. The warranty certificate must be properly stamped, signed with the dealers name and show the exact date of purchase.
Note that you can also have an Authorized Retailer process the repair for you. Only authorized ZENO retailer or authorized Service-Centers are qualified to ensure proper after-sales service and are authorized to provide the warranty services in accordance to ZWB quality standards. Warranty work and maintenance must be done by an official Service-Center upon presentation of the guarantee card. Work performed by anyone other than an official ZWB Service-Center renders the warranty void.
The delivery time of any given repair varies according to the complexity of the work performed. Complete refinishing of gold, steel or steel/gold watches are very labor intensive and require extra lead-time. Occasionally, delays occur due to a lack of key parts. We are always striving to reduce our overall turnaround time.

Conditions of Guarantee

We herewith certify that your watch has been manufactured in accordance with the latest technical achievement, the assistance of the most modern equipment and based on first class material. Your watch was also subjected, prior to its sale, to a variety of several controls, which enable us to assume full responsibility as to any possible defect due to faulty material. This guarantee is valid during two years, from the date of purchase. The guarantee does not cover normal wear, nor the consequences of incompetent handling or damage by the purchaser or other persons, nor defects due to external circumstances. The water resistance is only guaranteed if the watch has not been subjected to severe shocks, the crystal and crown are not damaged, and the instructions for service have been carefully followed.

The guarantee will be accepted by approved ZENO-WATCH BASEL sales outlets on condition that it has been correctly completed in every detail, that is: The name and address have been entered and a stamp and signature have been added by a sales office approved by ZWB it bears the reference number of the watch and the date of purchase.

The guarantee does not affect the purchaser's statutory rights in the country of purchase. ZENO-WATCH BASEL reserves the right to replace a damaged watch with another identical one or with an equivalent model.

Date:

Ref. No.

Retailer:

Stamp:

ZENO-WATCH BASEL

Independent Swiss Watchmanufacturing
since 1922

Printed in Switzerland